

Dear Valued Customer,

See below for some important information regarding the Kitchen 5 Fire Extinguisher.

Brand Name:

First Alert



Model Name / Number:

1048261

1039891

1044121

1046092

1047017

1047063

1048304

1048420

KFE2S5A

KFE5-A

Kitchen5

HOW TO INSTALL THIS EXTINGUISHER AND REMOVE IT FROM THE BRACKET.



Please follow these instructions to remove the bracket from the extinguisher.
**PLEASE REMOVE THE DEVICE FROM THE BRACKET IMMEDIATELY UPON PURCHASE.
DO NOT STORE THE UNIT WITHOUT FOLLOWING THESE STEPS.**

⚠ CAUTION!


- Do not mount the extinguisher on drywall or plaster without adequate support. Use strong screws or bolts to mount the bracket securely into solid wood or metal that can support it, like a wooden partition stud. Secure mounting is needed so you can remove the extinguisher quickly and easily in an emergency. Also, if the extinguisher is not held securely, it could drop to the floor and injure people or damage the extinguisher.
- Do not break the plastic loop holding the safety pin in place! This loop prevents accidental discharge of the fire extinguisher. Break the loop only in an emergency before using the fire extinguisher.

NOTE: Since wall surface types vary, **mounting screws are not included.** Purchase screws or bolts specifically designed for the surface on which you will mount the fire extinguisher. The fire extinguisher label lists its maximum weight.

⚠ WARNING!

If you do not mount the fire extinguisher on the wall, you must remove the cap and store it separately. Failure to remove the cap from a free-standing extinguisher may prevent it from working properly in an emergency.

1. Hold the extinguisher with the back (mounting surface) of the cap facing you. Make sure to hold the metal canister, not the plastic cap.
2. Grasp the rectangular release handle **with two fingers** on the back of the cap. Pull the handle **with two fingers** up to remove the cap/bracket from the extinguisher as shown.

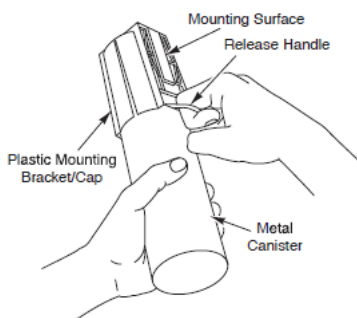



Instructions on how to remove the cap/bracket from the extinguisher in case the Pull Tab is broken (See the picture below).



- The Cap/Bracket can be easily opened with the use of a flat tool like a flathead screwdriver as follows. (Please see the picture below).
 1. Locate the seam where the two halves of the Cap/Bracket come together and insert an appropriately sized flat tool between the plastic Cap/Bracket and Metal Canister as shown.



2. Once inserted, slide the tool around the inside of the Cap/Bracket in the direction of the label.



3. Continue moving the tool in this manner past the label as needed until the Cap/Bracket opens.




- Once cap/bracket is removed, please continue with the next steps below.

3. If you are not mounting the unit, please discard the Cap/Bracket and store the Fire Extinguisher in an appropriate location.

If you are installing the unit, install the mounting bracket on a wooden stud or other solid surface that will support the weight of the extinguisher. Use 1-1/4" (3.17 cm) long #8 pan or round screws with a #8 washer as shown.

Choose at least two of the six holes provided on the Mounting Bracket/Cap. Using two holes that are opposite each other (i.e. the top and bottom center holes) is recommended. Mounting screws are not included (see Note above.)

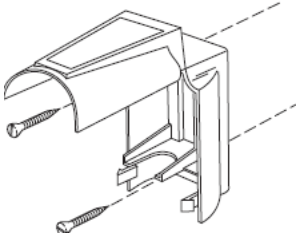

4. After installing the mounting bracket, replace the extinguisher on the bracket with the label facing outward, so the label can be easily read.

